



Choose Peace of Mind. Choose Haier Thermocool.

 
45/47, Town Planning Way, Ilupeju Industrial Estate,
P.M.B 21132, Ikeja, Lagos, Nigeria.
Customer Care Line: 0700thermocool or 07008437662665.
E-mail: hpzcustomercare@hpz.com.ng



USER MANUAL OF REFRIGERATOR

Model:


HRF-80BEX
HRF-95BEX
HRF-120BEX

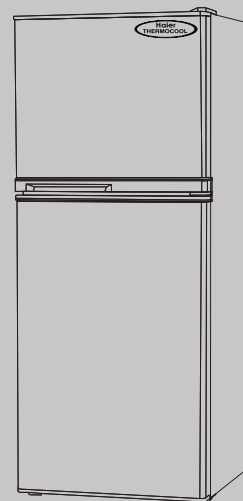

Congratulations for choosing a high quality product by Haier THERMOCOOL.
Please read this owner's manual carefully before using your production.
Now you will be cool, with Haier THERMOCOOL.

 *From the HPZ Limited*

 ◇ Structure Illustration

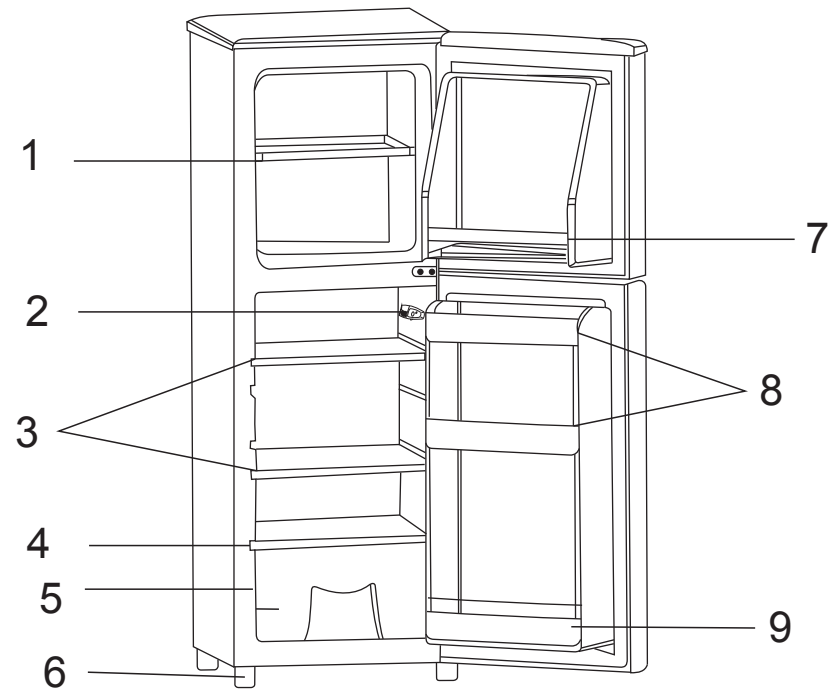

- 1. Freezer shelf
- 2. Refrigerator temperature control knob
- 3. Refrigerator shelf
- 4. Crisper cover

- 5. Fruit and vegetable case
- 6. Adjustable foot
- 7. Bottle railing
- 8. Egg shelves fence
- 9. Big bottle rack

Note: Compartment design may change due to produce improvement with any prior notice.

◆ Points of safety

- For proper usage and safety, please read the «Instruction» before using it.
- Please follow all items of Instruction for safety while using it.

	Cautions	This symbol indicates the possibility of death or serious injury.
	Attentions	This symbol indicates the possibility of injury or damage to property.

The meaning of symbols used in this manual is shown in following table

	Never do this
	No touching
	No removing
	Must follow while using it
	Pull the plus out during maintenance
	Connected to the earth

Attentions

Customer cannot change the plug and wire without authorization. If the wire is destroyed, it should be changed by the service authorized service personnel

⚠ Cautions

Own socket for its own use

The electric power must be well connected to the earth.



 
Keep the plug and socket clean

Dust and bad connection might cause electric shock.




No extruding the plus strongly

Short circuit caused by damaged plug can make fire.

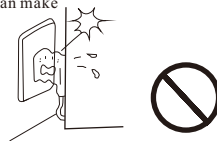


No damaging the power line

 Short circuit caused by forcible bending, stretching, twisting packing, cutting the wire might make fire.

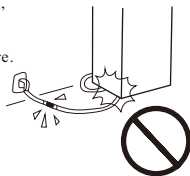

◆ INSTALLATION

 1 Placing rightly

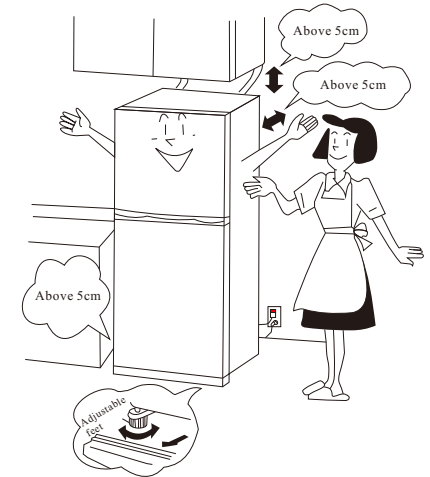

Keeping proper space

- Too small space around it, putting goods on the top or side, and pasting our on the side might prevent heat generation, resulting in unnecessary wastage of energy.
- Contacting between back and wall might cause vibration and noise. Heat radiated from the refrigerator might wear our the wall or other things of space is too small.

Avoiding heat and moisture

- Heat, sunlight shining directly would influence cooling seriously and waste the electric energy.
- Many troubles are caused by moisture.

Locating firmly and horizontally

- Rotate the adjustable feet one round (let the from feet hand in the air) and then firm the refrigerator horizontally (to avoid vibration and noise).

! Attentions

A piece of wood should be placed first if the refrigerator is located on the carpet etc.

Earth line

! Cautions

The earth line should be connected if the refrigerator is located at the moist place such as toilet, laundryroom, basement etc.

Earth terminal (triangle plug)

- Please connect one side of the earth line to the earth terminal

 
2

Tear down the tape firming case




3

Turn on the power



4

 Storing after turning on power 4~5 hours

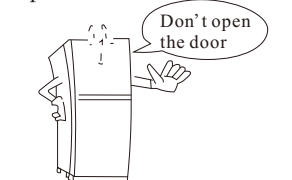

The smell of plastic will disappear automatically a period later.

● In hot season freezing foods completely needs 24 hours. check the cooling condition in the next day .something such as ice-cream should be frozen completely.

5

Pay more attention while moving.

Screw compressors are adopted inside. Inclination angle is no more than 45 degree.

Temperature adjustment . . . Usually in MID position

Temperature knob is to be adjusted temperature of box. The number on it can not show temperature Big number show the temperature of box is low and little number show is high."0" show stop. In winter, usually place the knob at 4-7, In summer usually place the knob at 4-1.

Caution:

1. Please obey the step of control;
2. Improper adjust may lead to lower temperature, higher temperature or influence energy consumption.

Changing the light bulb

If you need to replace the lamp, please according to below instruction,

1. pull out the power plug first,
2. unscrew the old lamp, replace the new lamp,

Note: the lamp power is 10W, the bulb must be according to IEC 60079-15.

⚠ Cautions

 
No stretching of the power line directly

Please shut the power off while handling the plug, damaged wire might make fire.




Never use damaged wire, plug, socket

It might cause electric shock, short circuit, even fire.




Shut off power while maintenance

 Unplug the socket while cleaning.

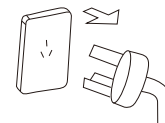


Pull our plug in emergency

 Accident(short circuit) may happen if it continues to run. Please contact to the authorized service personnel without delay.

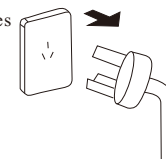


Be sure to connection to earth well

 Make sure the appliance is properly earthed.



Do not install the unit in moist place

 Avoid using the appliance in a damp moist place.

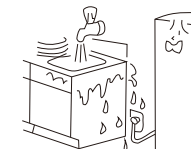

If inflammable gas is leaked, open the window to have fresh air, do not pull out plug

Spark may happen if the plug is pulled out which can result in fire or explosion.



Do not remove or repair it by yourself

Please contact with the authorized service center without delay.



⚠ Cautions

Remove the door gasket while discarding it

Remove the door gasket to avoid children being trapped inside.



⚠ Attention

Please locate it on even and smooth place, regulate by screwing the feet

Turning over would cause accidents.

 


To avoid frostbite, do not touch foods and vessel in freezer with moist hands

Touching foods and vessel in the freezer with moist hands would cause frostbite.



Do not stretch hand to the bottom.



Close the door with the handle

Closing the door with hands on the upside, downside or other sides might hurt the fingers.



Do not store too much foods.

Too much storing drop the cooling efficiency.



Do not put bottle into the freezer case

Glass may explode and hurt people hand while storing or extracting foods.



Recycle foam, refrigerant, etc, according to relevant national regulations.

Forbidden to throw away foam, refrigerant, etc.

When place fridges, please remove the foam tray

Especially when use refrigerant 600a, should remove the foam tray, or cause to explode.

◇ Maintenance

Cleaning procedure



⚠ Cautions

Always disconnect the power plug.

 


Wipe off any oil on the surfaces
soak a soft cloth in warm water or dish abluent.
wiper off all abluent.



Back of refrigerator

Adjust the regulate feet and let it hang in the air, then moving it.
Clean the dust at back and ground

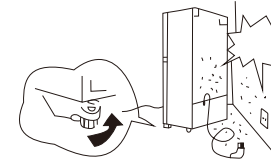


⚠ Attention

Do not stretch hands to the bottom

Inspection after cleaning

Caution

 Check power line and plug
If the power line and plug damaged.
Dust on the plug.
Unusual heat of plug.
If the socket become flexible.
If the plug inserted incompletely.
If the power line and plug are damaged or Sticked dust, it would cause electric shock or fire.

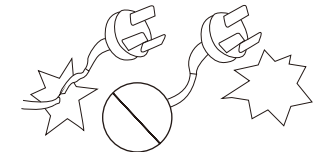

Replugging in the power at least 10 minutes later.



◇ Common phenomena trouble shooting

Instruction trouble shooting

the following cases are not malfunction. please check according to below steps before asking for service

- No current; abnormal voltage; fusing; out in the plus uneffectively ,check the plug and fuse.
- Not efficient
 - The temperature adjustment knob is in the 0 position;
 - space around the refrigerator is not enough;
 - the door has been opened too frequently and too long;
 - the refrigerator is exposed to the sunlight directly or place near some heat sources;
 - there is no space between foods;
 - there are hot foods inside the case.

Please read the points of attention, keep away from the heat source, do not open the door frequently , put the hot foods in the case after it is cooled down. adjust the knob to 5 to 6 position.
- Foods frozen in the refrigerator compartment or chilled case.
 - The temperature knob is in 7 position;
 - foods containing rich water and freeze easily are near the rear wall.troubles of sensors or controls, adjust the knob to 3 position
- Noises
 - the refrigerator is not located firmly;
 - the refrigerator has been struck to other objects;
 - the copper pipe has been struck each other in the mechanical room;
 - locate the refrigerator at a firm base and separate the copper pipe from other objects in the mechanical room
- Compressor can not stop working automatically
 - store too much foods at one setting;
 - open the door frequently or too long;
 - the temperature knob is in 7 position;

Foods should be stored in separated batches, do not store too much food at one setting;
Decrease the frequency of opening the door and shorten the time of opening the door;
- Compressor cannot start
 - turning on the power, the refrigerator cannot work exceeding 30seconds.pullthe plug down at once.
 - Reinsert the plug, if the refrigerator still do not work. Please contact with service department.

WARNING:

- WARNING---keep ventilation opening, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING---do not use mechanical devices or other means to accelerate the defrosting process.
- WARNING---do not use electrical appliances inside the food storage compartments of the appliance.
- WARNING---do not damage the refrigerant loop.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- WARNING----Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING----Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Correct Disposal of this productThis marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Haier THERMOCOOL produce high quality refrigerators which are strong, reliable, elegantly styled – yet practical and long lasting for most demanding tropical climate and conditions.

Haier THERMOCOOL new generation refrigerators are convenient to use, highly efficient, energy saving and are built for quiet running to withstand voltage fluctuations.

Unique **Haier THERMOCOOL 36 MONTH GUARANTEE** on compressor and cabinet gives you peace of mind and assured satisfaction from the moment of purchase. The 12 MONTH GUARANTEE covers:

- FREE Parts replacement under warranty
- FREE Repair under warranty

Unique **Haier THERMOCOOL NATIONWIDE SALES and SERVICE NETWORK** offers you fast, reliable service and replacement spare parts which will normally available for many years. Sales & Service available in ILUPEJU, IBADAN, BENIN, WARRI, PORT HARCOURT, ABA, ENUGU, ONITSHA, KADUNA, ZARIA, KANO, JOS, MAIDUGURI, MINNA, ABUJA. Contact **HPZ** or your **Haier THERMOCOOL** distributor for information.

Choose Peace of Mind. Choose Haier Thermocool.

Haier THERMOCOOL reserves right to amend specifications without notice as part of its continuous improvement programme. Haier THERMOCOOL is a registered trademark.

Assembled by  **Limited**

45/47, Town Planning Way, Ilupeju Industrial Estate,
P.M.B 21132, Ikeja, Lagos, Nigeria. Tel: 0700THERMOCOOL (07008437662665)
E-mail: hpzcustomercare@hpz.com.ng